



# Mute Flow Room Divider Installation Guide

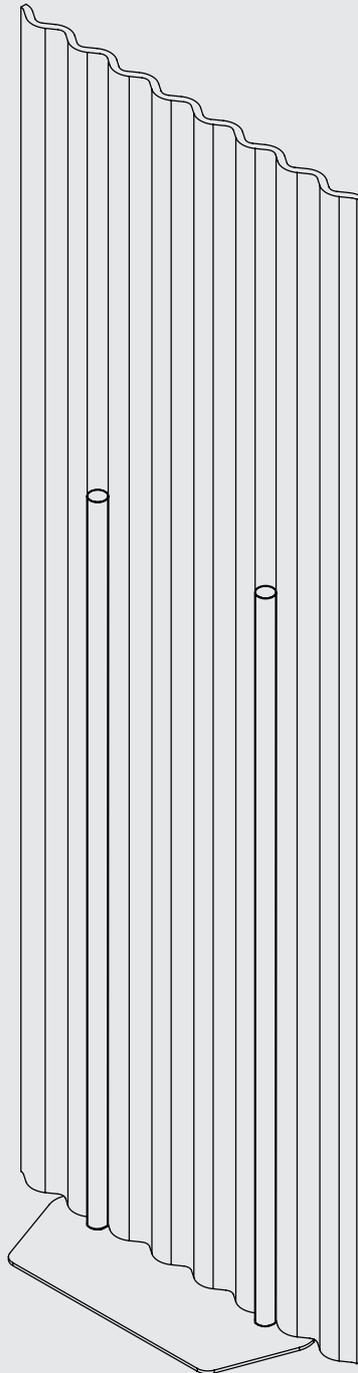

DeVorm

Parts required

Tools required

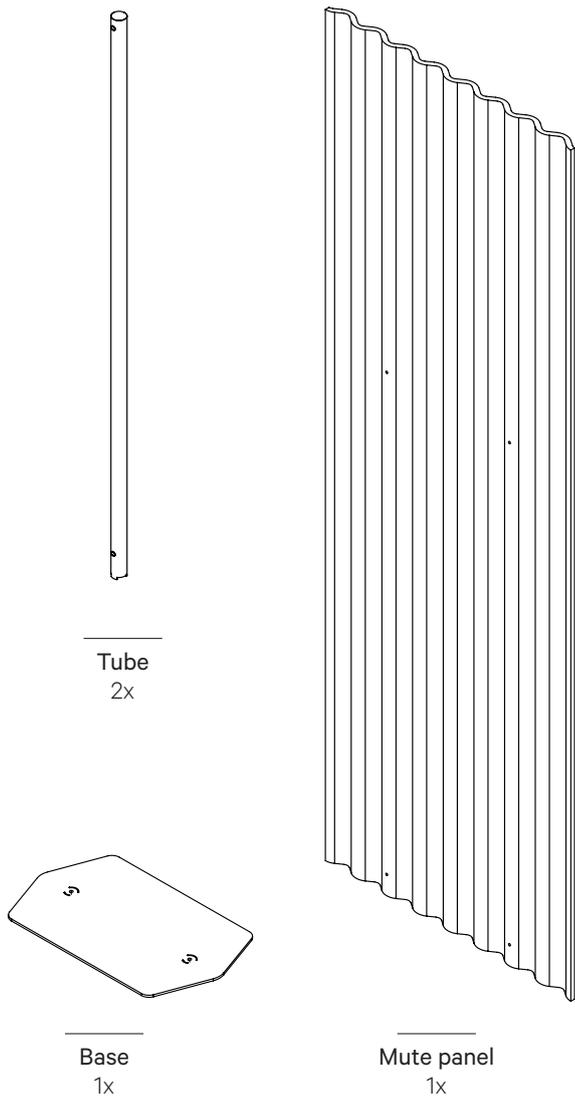


  
Countersunk washer  
M6  
4x

  
Allen bolt  
M8x25  
2x


  
Allen bolt  
M6x30  
4x

  
Felt glider  
30x30mm  
4x

  
Allen Key  
BZK 4


  
Allen key  
BZK5

- Fit both tubes into the base and bolt it tight with the M8x25 allen bolt. Place the felt gliders on the bottom of the base (4x).

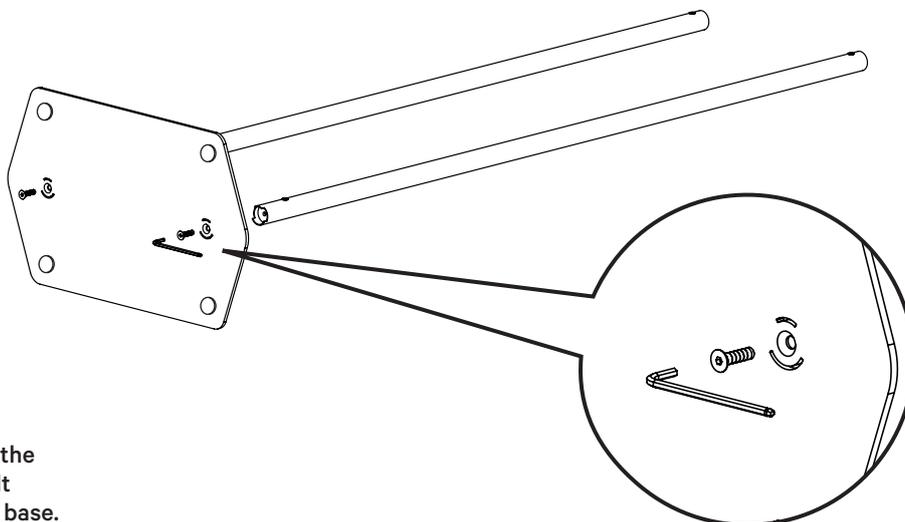


-  Make sure that the M8x25 allen bolt is sunk into the base.


- 
- 2 Attach the Mute panel to the stand with 4x M6x30 allen bolt and 4x countersunk washer. Make sure the Mute panel is placed correct.

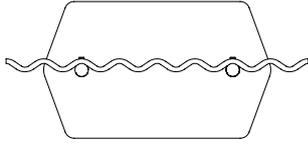

! Place the Mute panel correctly around the two tubes.

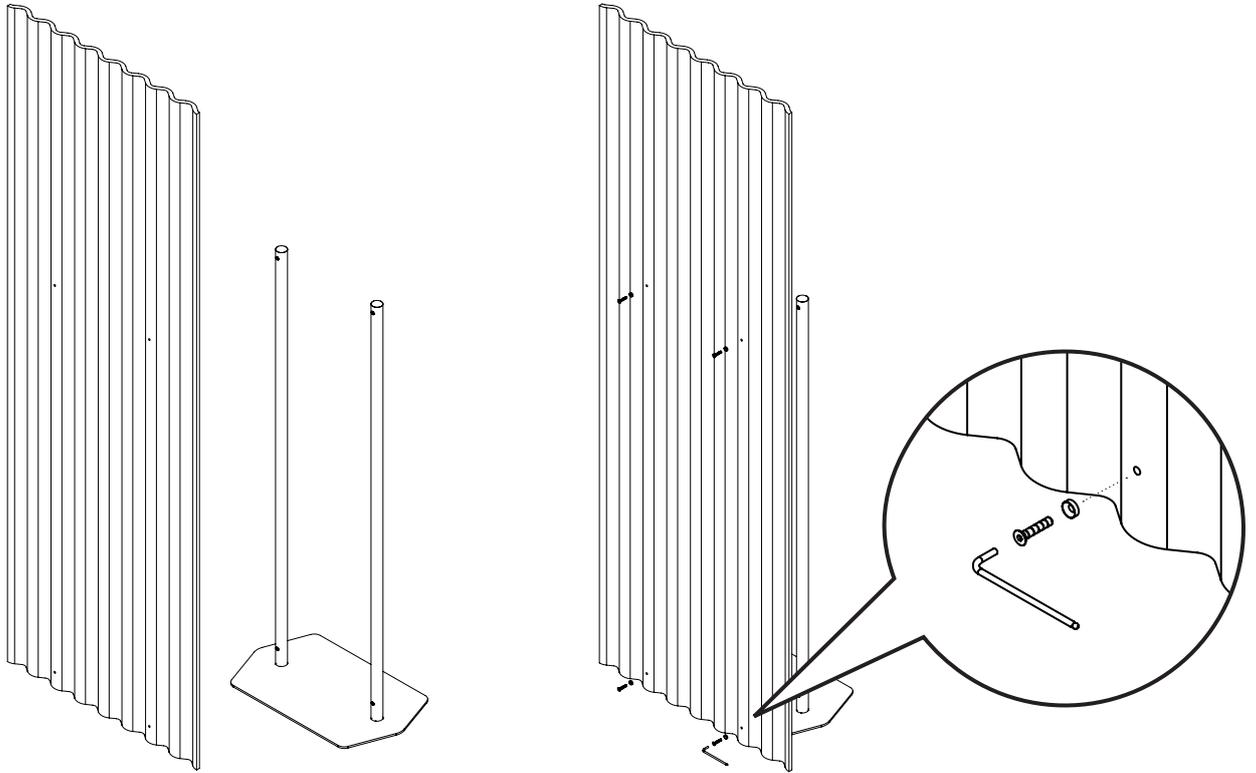

- 
- 3 Congratulations, it's done!

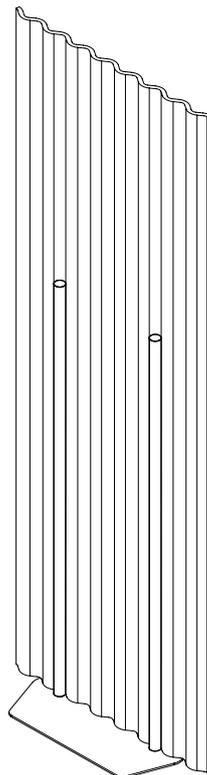

# DeVorm

## We create interior products by today's standards.

De Vorm is established in a new era, we develop products by the standards of today. This means we produce efficiently, use the full lifecycle of products and eventually give them a new life.

Our emphasis lies on making a product that works, by setting a variety of conditions; it should be legible, accessible, but also environmental friendly and aesthetically perfectly in balance.

## We like a product because of its functionality.

A good product makes life easier — by helping us function better throughout the day. We firmly believe that the beauty of a design lies in the sum of its functions. That is what makes it a complete product.

## We continuously raise the bar.

From the very first sketches we already start searching, combining and developing new techniques to find new possibilities to innovate. Our design process is infused with technical development; techniques result in aesthetic features and the other way round.

Leemansweg 45  
6827 BX Arnhem  
The Netherlands

T +31(0) 268 200 360  
E [info@devorm.nl](mailto:info@devorm.nl)  
W [www.devorm.nl](http://www.devorm.nl)