



Assembly instructions

Clamp wall

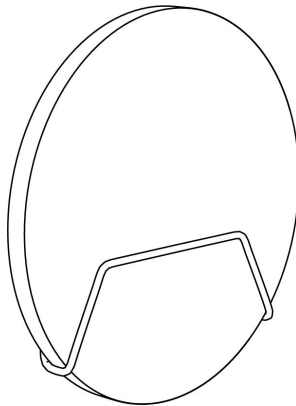

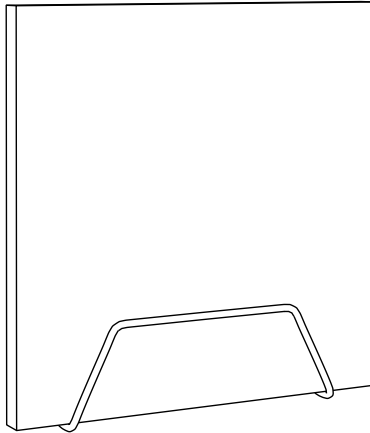

Check to make sure that the bracket is perfectly horizontal. Then mark the position of the fixing screws.



Secure the bracket in place with suitable screws.



Slide the sound absorber into place in the bracket.